

Machine/Tool ID:	SCML-1 Surface Cleaner 15"
Vendor:	Rug Doctor
Vendor Website:	www.rugdoctor.com
Mfg. Support Phone No.:	1-800-784-3628

Tool Application: The Surface Cleaner attachment reduces cleaning time (up to 4X) required to pressure wash large, flat surface areas such as driveways, sidewalks, garage floors, patios, decks, and more.

Operation Guide: Read all instructions completely before you begin.

USER MUST CAREFULLY READ AND FULLY UNDERSTAND ALL INSTRUCTIONS BEFORE USING THIS SURFACE CLEANER.


Before operating surface cleaner, renter agrees to fully read, understand, and follow all safety warnings and instructions set forth below, which can be found on Rug Doctor's website (www.rugdoctor.com).

USING THE SURFACE CLEANER ATTACHMENT

1	Turn the water source off. Ensure Rug Doctor pressure washer is OFF & squeeze spray gun TRIGGER to release high pressure water. Disconnect spray WAND from TRIGGER HANDLE.
2	Remove surface cleaner LANCE from clips. Pull back COUPLER and insert LANCE into Surface Cleaner until you hear "click" then release COUPLER.
3	Connect assembled surface cleaner LANCE to TRIGGER HANDLE by inserting together & hand tighten until secure.
4	Place Surface Cleaner on surface to be cleaned. Turn pressure washer ON & squeeze spray gun TRIGGER. Walk slowly behind surface cleaner & pull backwards to clean. If striping or swirling occurs, slow your pace.
5	When finished cleaning, prepare Surface Cleaner for return. With Surface Cleaner still on ground, squeeze spray gun TRIGGER to release high pressure water. Disconnect surface cleaner LANCE from TRIGGER HANDLE & Surface Cleaner. Secure Surface Cleaner LANCE in clips. Remove and wash debris from under Surface Cleaner & use a dry cloth to wipe down shroud.

Safety Guide: Read all instructions completely before you begin.

USER MUST CAREFULLY READ AND FULLY UNDERSTAND ALL INSTRUCTIONS BEFORE USING THIS SURFACE CLEANER. Before operating pressure washer with the surface cleaner attachment (collectively, the "equipment"), renter agrees to fully read, understand, and follow all safety warnings and instructions set forth below and in the operator's manual, which can be found on Rug Doctor's website (www.rugdoctor.com). Equipment may contain water. When using equipment, basic precautions should always be followed, including the following:

 **WARNING** This product can expose you to chemicals including Di(2-ethylhexyl)phthalate (DEHP), which is known to the State of California to cause birth defects or other reproductive harm, and lead, which is known to the State of California to cause cancer, birth defects, and other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

 **WARNING TO REDUCE RISK OF FIRE, ELECTRIC SHOCK, SERIOUS INJURY, OR DEATH:**

- Read all instructions on the Rental Agreement, on equipment, and in the Operator's Manual before using equipment. Use only as described on the Rental Agreement, on equipment, and in the applicable Operator's Manual and only with the manufacturer's recommended attachments or components.
- Never allow rotating parts to strike any object, person, or pet.
- To reduce the risk of injection or injury, only use the surface cleaner on flat, horizontal surfaces. Never lift the surface cleaner from the cleaning surface while operating the pressure washer.
- DO NOT put hands under the surface cleaner shroud when surface cleaner is connected to the spray gun – rotating parts can cause serious damages and/or injuries.
- Do not use the surface cleaner on raised objects. Striking any raised object while using the surface cleaner will cause damage.
- To reduce the risk of property damage or injury, spray the pressure stream in a safe direction to ensure proper connection of all accessories and attachments before starting any cleaning project.
- Rug Doctor is not liable for damaged caused by wrong installation.
- Connect pressure washer to a properly grounded outlet only. See applicable Operator's Manual and "Grounding Instructions" below.
- Never operate surface cleaner without all components properly connected to the pressure washer. Examine equipment before use for visible deterioration, such as abrasions, cracks, splits, and the like.
- Never operate equipment with broken, damaged, or missing electrical and mechanical parts (including the power cord). If equipment is not operating as it should, has been dropped, damaged, left outdoors, dropped into water, or if parts are damaged, broken, or missing, do not use equipment, immediately return to store, and notify Rug Doctor at (800) 784-3628. Do not attempt to repair any damaged or broken equipment under any circumstances.
- Before using equipment, understand how to turn equipment on and off and be thoroughly familiar with equipment controls and how to operate them.
- Stay alert - watch what you are doing.
- Do not operate equipment when fatigued or under the influence of alcohol or drugs.
- Do not allow to be used as a toy. Do not operate equipment near children. Never allow children to operate equipment. Keep operating area clear of all debris, people and pets.
- The fast, strong spray can throw objects that strike and injure others who are close by. Always ensure that all people and pets are at least 25 feet away during use.
- This tool should not be used by anyone under the age of 18.
- Do not stand on unstable surfaces. Do not overreach or stand on unstable support. Keep good footing and balance at all times.
- Power connections and plug should be kept dry and off the ground. Do not run equipment over electrical outlets that may be located on the floor.
- Do not touch plug or operate equipment with wet or sweaty hands. Wear rubber-soled shoes when cleaning.
- Do not submerge equipment, expose to rain, or place equipment in standing water.
- Do not leave equipment when it is plugged in or while it is powered on. Unplug from the outlet when not in use and before cleaning.
- Always turn off equipment before connecting or disconnecting any applicable attachment.
- Always move switch on equipment to off position before connecting or disconnecting cord to electrical outlets.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run equipment over cord. Keep cord away from heated surfaces.
- Never cut or splice the equipment's power cord.
- Never modify earthed plug.
- Do not use an extension cord. Failure to follow this instruction may expose Renter to the possibility of electric shock, personal loss or injury and/or death.
- Do not use bleach, dye, laundry detergents, cleaning powders, harsh solvents or chemicals, or any non-Rug Doctor products with equipment as permanent damage to your property may result.
- Do not use, spray, place or pick up flammable or corrosive liquids, acids and solvents in equipment or use equipment in an area where combustible dust, liquids, or vapors are present. Do not place in or pick up anything with equipment that is a caustic or toxic material, such as bleach, ammonia, toilet bowl cleaners, or drain cleaners. An electric spark could cause an explosion resulting in serious personal injury or even death.

- Never cover equipment during operation, equipment needs to allow free air cooling. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts. Do not put any objects into openings or use with opening blocked. Keep openings free of dust, lint, hair, and anything else that could reduce the flow of air.
- Operate equipment ONLY outdoors.
- Before using equipment, learn how to stop and release pressure quickly.
- Make sure safety lock is engaged prior to turning equipment on and pressurizing. Always lock the trigger of the trigger handle in the safety position when not in use.
- Make sure safety lock is reengaged when cleaning is complete. The safety feature DOES NOT lock trigger in the on position.
- Keep clear of nozzle. High pressure jets can be dangerous if misused. The jet and spray wand must not be directed at windows, persons (including yourself), animals, electrical devices and wiring, or equipment itself.
- Equipment can cause serious injury if the spray penetrates the skin. In case of penetration, seek medical aid immediately.
- Risk of eye injury. Spray can splash back or propel objects. Always wear safety glasses or goggles when using or in vicinity of this equipment.
- Never point equipment at yourself or others.
- Never attempt to push or move objects with spray from the equipment.
- Keep equipment as far as possible from area to be cleaned to minimize contact with water.
- Hold spray wand, trigger handle, and nozzle firmly with both hands when starting and operating equipment to reduce risk of impact injury from kick-back following pressurization.
- Never put hands or fingers over the spray nozzle or spray tip while operating equipment. Do not move spray tip while spray trigger is depressed.
- Never disconnect the high pressure hose from equipment while the system is pressurized. To release pressure from equipment, turn power and water supply off, then depress trigger 2-3 times. Discharge residual pressure by depressing the trigger until no more water comes out of the nozzle.
- Do not run pump dry. Always turn the water supply on before turning the power to equipment on. Running pump dry causes serious damage.
- Use only Rug Doctor Outdoor Cleaner Concentrate. Always follow manufacturer's label recommendations for proper use of solutions. Always protect eyes, skin and respiratory system from solution if used.
- Do not use pressure that exceeds the operating pressure of any of the parts (hoses, fittings, etc.) in the pressurized system. Never use with any other manufacturer's accessories or components.
- Do not operate equipment with the inlet water filter removed. Keep filter clear of debris and sediment.
- To minimize the amount of water getting into equipment, pressure washer should be placed as far as possible from the cleaning site during operation.
- Always rinse the cleaning area after applying cleaning solution. If cleaning solution is allowed to dry on painted surface, damage may result.
- Do not submerge or try to clear flooded areas with equipment.
- Do not use or place equipment on or near wood, laminate, or natural fiber floors. Do not use or place equipment on upholstery, carpet, or rugs.
- Only use cold water in connection with the operation of equipment and make sure equipment is connected to a water hose at least one half inch in diameter.

GROUNDING INSTRUCTIONS

This equipment must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This equipment is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

WARNING Improper connection of the equipment-grounding conductor can result in a risk of electrical shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the equipment. Do not use if the plug does not fit the outlet. equipment is for use on a nominal 120-volt circuit and has a grounded plug as illustrated here. Make sure the equipment is connected to an outlet having the same configuration as the plug. Do not use an adapter or extension cord.